WEIGHT STACK PINS

THE CORRECT WEIGHT STACK PIN FOR THE CORRECT MACHINE

When you originally purchased your BODY MASTERS selectorized machine, it came with the correct size BODY MASTERS weight stack pin.

In the interest of safety, it is imperative that <u>only the correct weight stack pin be used with your machine</u>. Failure to insure a proper matching of the weight stack and pin could result in product failure, or even worse, serious injury to the user

Please carefully check your machine/s to insure that the proper pin is being employed. Keep in mind that **BODY MASTERS** has produced (5) different sized weight stacks requiring different-sized pins.

To assist you in this inspection/verification process, please refer to the following diagrams which illustrate the (5) basic weight stack designs and their corresponding pin sizes.

BODY MASTERS WEIGHT PLATE/PIN SIZE DIAGRAM A

WEIGHT STACK PLATE SIZE				WEIGHT STACK PIN SIZE			Full Circle Padding Part Number
THICKNESS		WIDTH HOLE SIZE		DIAMETER SH		SHAFT LENGTH	Full Circle Part Number
3/4"	X	4"	(3/8" i.d.)	5/16"	X	4"	FW740
5/8"	X	5"	(5/16" i.d.)	1/4"	x	3-1/2"	FW713
1"	x	3"	(7/16" i.d.)	3/8"	x	4"	FW741
1"	x	6"	(7/16" i.d.)	3/8"	X	5-1/2"	FW742
3/4"	x	6"	(3/8" i.d.)	5/16"	X	5"	FW716

If you no longer have the original weight stack pin/s that came with your **BODY MASTERS** machine/s, notify our Parts Department for the proper replacement pin/s.

BODY MASTERS WEIGHT PLATE/PIN SIZE DIAGRAM B PLATE & PIN NO. 1 PLATE & PIN NO. 2 5/16 3/8' 5/16" PLATE & PIN NO. 4 PLATE & PIN NO. 3 7/16 7/16 6" 3/8" 3/8" PLATE & PIN NO. 5