

Handle Kit

Installation Instructions

TOOLS REQUIRED

- 5/32" Allen wrench
- Rubber Mallet

1. Read and understand all instructions thoroughly before installing this kit.
2. Verify kit contents. See Figure 1.

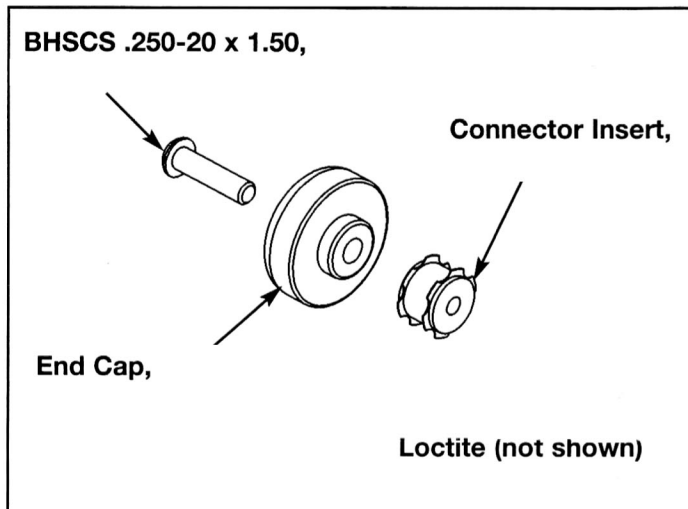


Figure 1

3. Install end cap.

- A. Place threaded end of BHSCS through end cap.
- B. Place a drop of loctite on threads of insert connector and on threads of the BHSCS..
- C. Screw the BHSCS into the insert.
- D. Using a rubber mallet, lightly hammer the BHSCS/endcap/insert into the handle.
- E. Tighten the BHSCS.
- F. Repeat steps 3A - 3F for the other handle.

NOTE: If using existing connector insert in place of the one sent with this kit, then perform steps 3A - 3C and 3E - 3F (skip 3D).

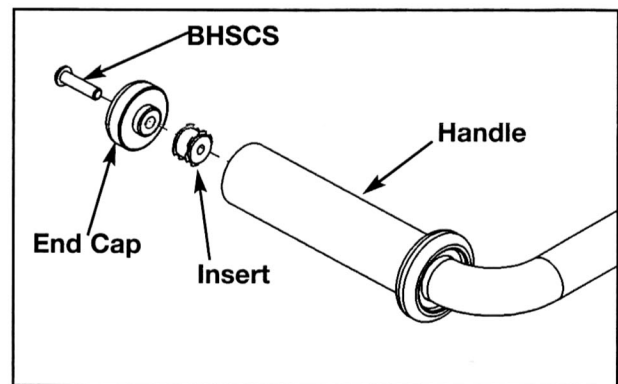


Figure 2